

MYSTIC CLASSIC MOTORIZED SCREEN INSTRUCTIONS TO SWITCH MOTOR SIDE

BEFORE BEGINNING THE PROCEDURE TO SWITCH THE MOTOR SIDE, BE SURE TO READ THESE INSTRUCTIONS CAREFULLY AND COMPLETELY.

- (a) If unit is already installed, disconnect power and remove the electrical 3-prong plug from the end of the power cord.
- (b) Remove the motorized screen and tube assembly from the canister.
 - (i) remove the Cotter pin securing the motor to the motor side end-cap of the canister;
 - (ii) hold the screen tube firmly and push sideways to compress the spring on the idler end. This will free the motor from the motor bracket so that the tube can be removed from the canister along with power cord;
 - (iii) set the motor tube with the screen panel aside.
- (c) Switch Motor Bracket and Idler Bracket:
 - (i) unscrew the Motor Bracket and Idler Bracket from their respective side cap
 - (ii) reinstall the Motor Bracket and Idler Bracket on the desired side. Be sure to use thread-locking material to securely install the screws.
- (d) Unroll and re-roll screen panel to operate on new motor placement:
 - (i) orient the motor tube and screen panel assembly so that the motor is on the desired side;
 - (ii) unroll the screen panel and re-roll it tightly and such that the screen falls off the back of the motor tube.
- (e) reinstall the motor tube and screen panel assembly on the hood.
- (f) reverse the direction of the motor.

FOR ADDITIONAL ASSISTANCE CALL 678-926-9700